

OdaTrak™ System

Odour Control Solution

Designed specifically for the OdaLog L2

Features & Benefits

- **Specifically designed for harsh wastewater environments**
 - Unique adapter fully sealed
 - Proven & robust design
- **Quick & easy installation**
 - Standard M20 electrical thread
 - Special machined housing for easy mounting of the OdaTrak fibre optic cable
- **Programmed fault detection**
 - OdaTrak detects loss of data from the OdaLog
 - OdaTrak will output a fault signal on the 4-20mA line alerting user to fault condition
- **Special fibre optic cable**
 - Safe to use in most commonly found Hazardous environments
- **Easy to transmit data**
 - Incorporates a 4-20mA adapter to transmit gas data using a fibre optic cable
- **Real time data**
 - Data readily available when connected to a PLC network



Typical Users

- Water Authorities
- Odour Control Companies
- Chemical Vendors
- Water Treatment Plant Municipalities
- Existing OdaLog Users


OdaTrak™ System

HOW IT WORKS

Data sent from the OdaLog L2 logger via fibre optic cable is read by the OdaTrak adapter. This then outputs the corresponding signal on a 4-20mA loop which is powered externally.

The system enables the OdaLog L2 to be interfaced with telemetry and control systems to provide the user with real time gas data.

The OdaTrak System requires two long term OdaLog loggers with each logger (LL-TF) in service no longer than four weeks, whilst the other OdaLog Logger is stored in fresh air.

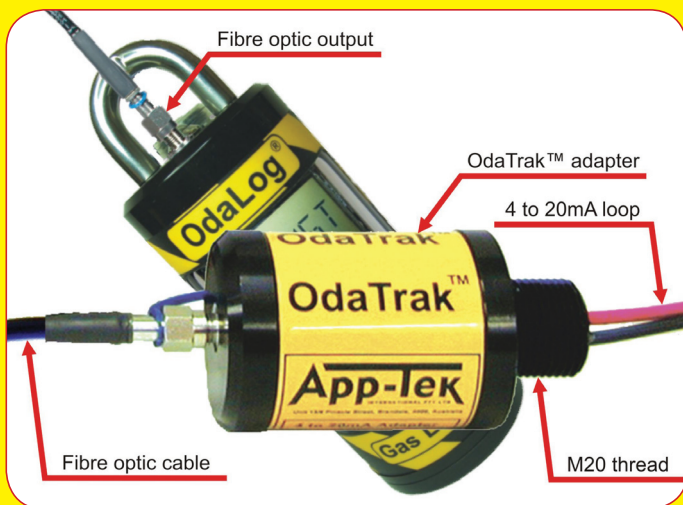

SERVICING

The OdaTrak adapter requires no regular servicing. However, we recommend that the OdaLog L2 is returned to an authorised App-Tek service centre at least once every six months for a full inspection, calibration and linearity testing.

WARRANTY

12 months warranty for the OdaLog L2 and the OdaTrak System when used in accordance with the operator's manual (excluding calibration and freight costs).

*In the interest of continued improvement, we reserve the right to change design features and specifications without prior notice.

SPECIFICATIONS

Instrument Temp Range	-10° C to 40° C
External Dimensions	40mm diameter x 85mm long
Weight	150g
Relative Humidity Range	15-90% (non-condensing)
Pressure range	Atmospheric ± 10%
Maximum loop-to-housing voltage	28VDC
Loop supply voltage limits	12VDC to 24VDC (regulated supply - no ripple) 8VDC to 28VDC
Normal operating voltage:	Note: The OdaTrak™ adapter is powered from the 4 to 20mA loop.
Absolute min/max limits	
Maximum loop resistance	112 ohms at 12VDC 602 ohms at 24 VDC
0% FSD	4.0mA
100% FSD	20.0mA
Under range limit, - 2.5% FSD	3.6mA
Over range limit, +20% FSD	23.2mA
Fault signal	3.5mA
Loss of OdaLog® link timeout	30 seconds
IP rating	66
Fibre optic cable length	5 metres to 25 metres
Fibre optic cable minimum bend radius	40mm

AVAILABLE MODELS/RANGES

OdaLog L2 H2S Loggers - LL	
LLTF-H2S-200	OdaLog Fibre Optical H2S 0-200ppm
LLTF-H2S-1000	OdaLog Fibre Optical H2S 0-1000ppm
25-0356	OdaTrak Adapter Assembly
12-0008	Fibre Optic Cable 5 mts
12-0009	Fibre Optic Cable 10 mts
12-0010	Fibre Optic Cable 25 mts

Note: For longer cable please contact your App-Tek distributor

Manufactured by
App-Tek
 INTERNATIONAL PTY LTD

PO Box 5523, Brendale QLD 4500, Australia
 Ph: +61 7 3881 1360 Fax: +61 7 3881 2360